


S1103/05, S1117-900, R1

HOOVER®

Owner's Manual

Dubl•Duty™

Wet & Dry Cleaner

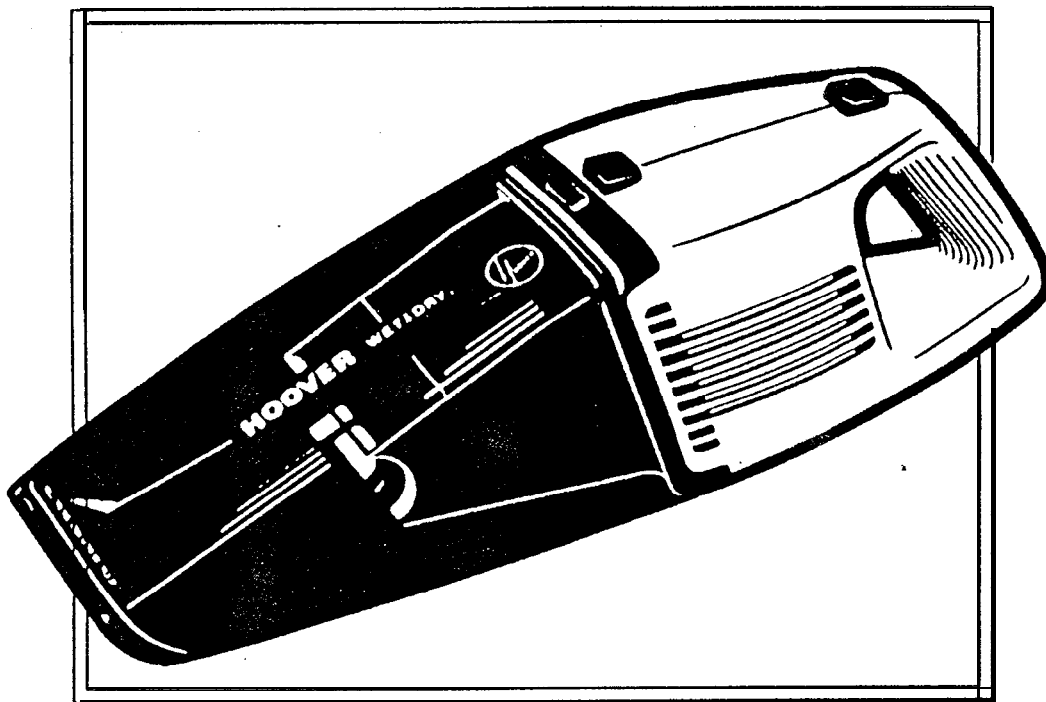

Review this
manual before
operating
cleaner

Thank you for selecting a HOOVER product.

This cleaner was inspected and packaged carefully before being shipped from the factory. If you should happen to need assistance during assembly or operation, call

1-800-944-9200 for automated referral of authorized service outlet locations (U.S. only) or

1-216-499-9499 to speak with a representative in our Consumer Response Center.

DO NOT RETURN THIS PRODUCT TO THE STORE.

Fill in and retain

The HOOVER vacuum cleaner you have just purchased is a **rechargeable** cleaner which is designed for both wet and dry pickup. It can be used with or without tools for quick clean-up on all types of surfaces.

The model and serial number are located on the bottom of the cleaner motor housing.

For your personal records, please enter the **COMPLETE** model and serial number in the spaces provided and retain this information.

Your cleaner is model _____

and has serial number _____

It is suggested that you attach your sales receipt to this owner's manual. Verification of date of purchase may be required for warranty service of your Hoover product.

Save! Index

Charging Cleaner	5
Cleaner Descriptions & Unpacking	3
How To Use	
Cleaning Tools	6
Picking Up Dry Debris	6
Picking Up Liquid & Wet Debris	7-8
If You Have a Problem	11
Important Safeguards	2
Lubrication	10
Maintenance	
Cleaning Your Dubl-Duty™ Cleaner	9-10
Emptying Collector Cup	8-9
Mounting Wall Bracket	4-5



Important Safeguards!

When using an electrical appliance, always follow basic precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

Warning: To reduce the risk of fire, electric shock, or injury:

Close supervision is necessary when any appliance is used by or near children. Do not allow vacuum cleaner to be used as a toy.

Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.

Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner and the filter.

Do not use without collector cup, filter and separator in place. Clean collector cup, filter and separator after picking up any perishable food items.

Use extra care when cleaning on stairs.

Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, or anything that may reduce air flow.

Do not unplug by pulling on cord. To unplug, grasp the charger, not the cord. Never handle plug or charger with wet hands.

Use only the charger supplied by the manufacturer to recharge this appliance.

The use of an extension cord is not recommended.

Do not use charger with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a Hoover Factory Service Center or Authorized Hoover Warranty Service Dealer.

Use vacuum cleaner only for its intended use as described in the instructions. Use only attachments recommended by The Hoover Company; others may cause hazards.

Save these instructions!

Unpacking






Unpack the cleaner from carton.
Remove and dispose of
cardboard packing.

A standard and a deluxe cleaner is
available.

Identify the model you have
purchased and the parts included.

- A. Hand-held cleaner
- B. Wall bracket
- C. Charger and cord
- D. Screws
- E. Anchors
- F. Squeegee
- G. Crevice tool

Be sure to charge your Dubl-
Duty™ cleaner for 16 hours before
using (see page 5).

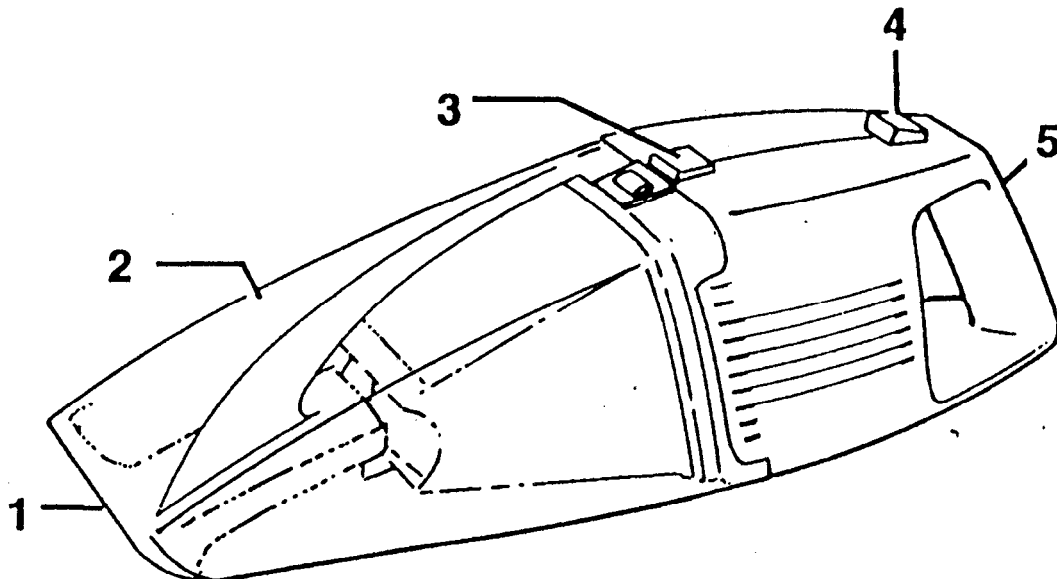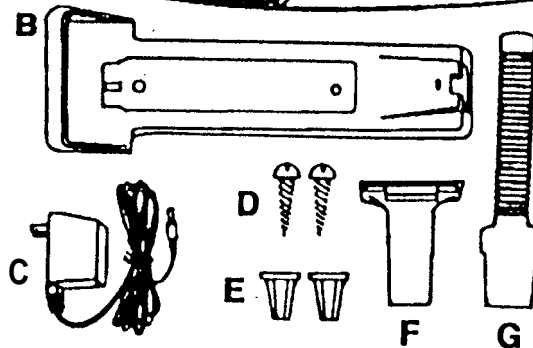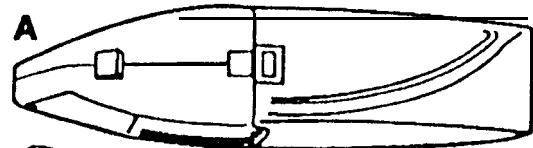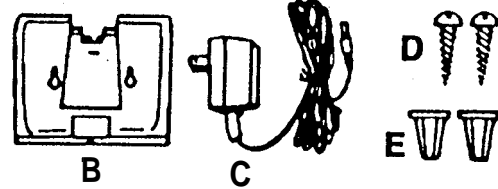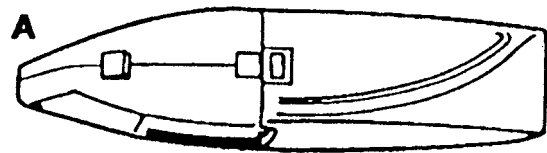

This cleaner is intended for
household use.

- 1. Multi-purpose nozzle
- 2. Collector cup
- 3. Collector cup latch
- 4. ON/OFF switch
- 5. Handle

Questions or Concerns?

The Hoover Company wants to quickly resolve any concerns about your cleaner or questions regarding its use. Look on the list provided with the product for your local **Hoover Factory Service Center** or in the Yellow Pages under "Vacuum Cleaners - Household" for the nearest **Authorized Hoover Warranty Service Dealer (Depot)** or call:

1-800-944-9200 for an automated referral of authorized service outlet locations (U.S. only)

OR

1-216-499-9499 to speak with a representative in the Hoover Consumer Response Center.

DO NOT RETURN THIS PRODUCT TO THE STORE OR SEND IT TO NORTH CANTON FOR SERVICE.




Mounting wall bracket

The wall bracket, included with your cleaner, is designed for both storing and recharging the cleaner. Choose a convenient place where the bracket can be mounted in a vertical position (with hook pointing up) and within six feet of an electrical outlet. Do **not use an outlet which is controlled with a wall switch for charging your cleaner.**

If bracket will be mounted closer to an outlet, wrap excess cord around projections on back of wall bracket.

Press end of cord into notch on bottom of bracket.

Hold bracket against wall in desired location and mark center of each hole. Drill a 1/8" diameter starter hole in center of each mark.

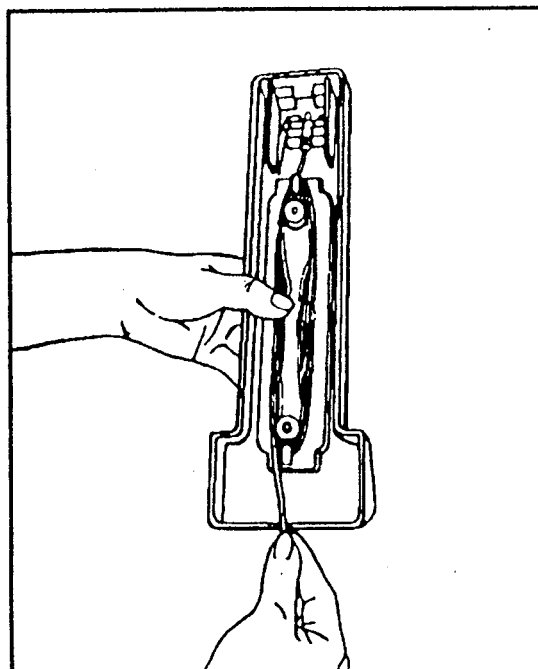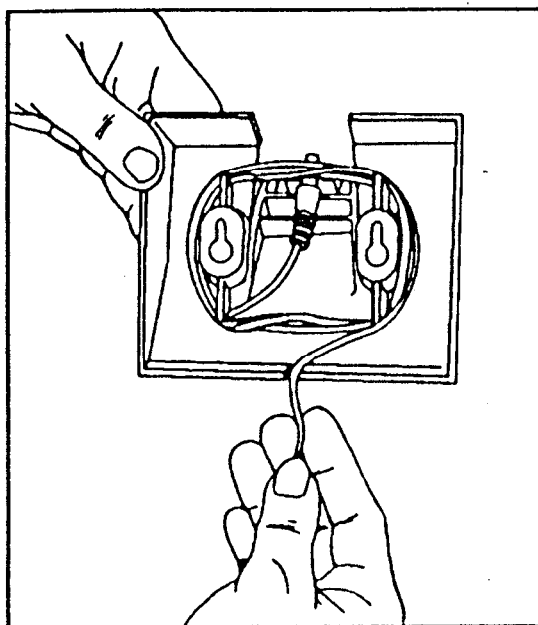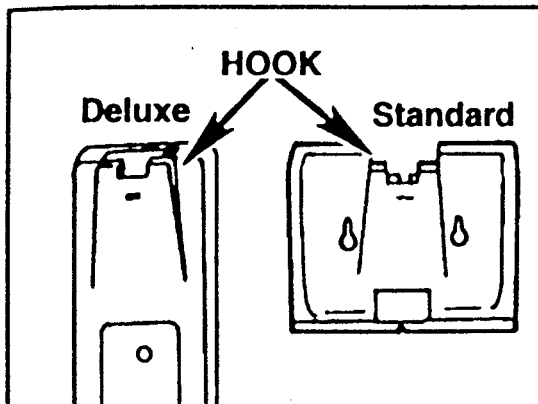


If wall bracket is being mounted onto dry wall, plaster, or thin paneling backed by dry wall or plaster*, enlarge starter holes to 13/64" diameter. Push plastic anchors fully into holes. Place bracket on wall over anchors. Begin driving screws into anchors. Tighten screws securely.

*Do not attempt to mount wall bracket onto thin paneling **without** a dry wall or plaster backing.

If wall bracket is being mounted onto a wall stud, solid wood or thick paneling, drill **only** the starter holes. Place bracket onto the wall and drive screws into holes without plastic anchors.

Position crevice tool and squeegee into deluxe wall bracket as shown.

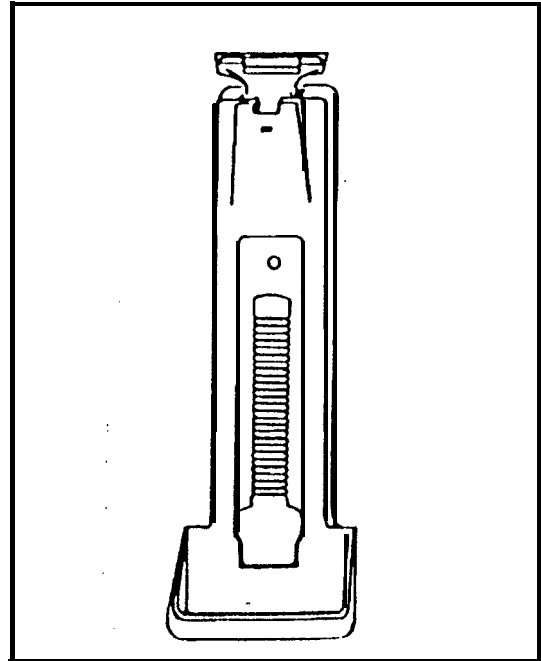


Charging cleaner

Plug charger into 110/120 volt electrical outlet.

Before charging, make sure the tools (deluxe model only) are not attached to the cleaner.

Hold cleaner with nozzle pointing down and opening in handle section aligned with hook in wall bracket. Slide cleaner straight down onto hook. **Press firmly on handle to ensure that end of cord is fully connected to cleaner.**

Your cleaner will begin charging. It is designed to be stored on charge and ready for use at all times.

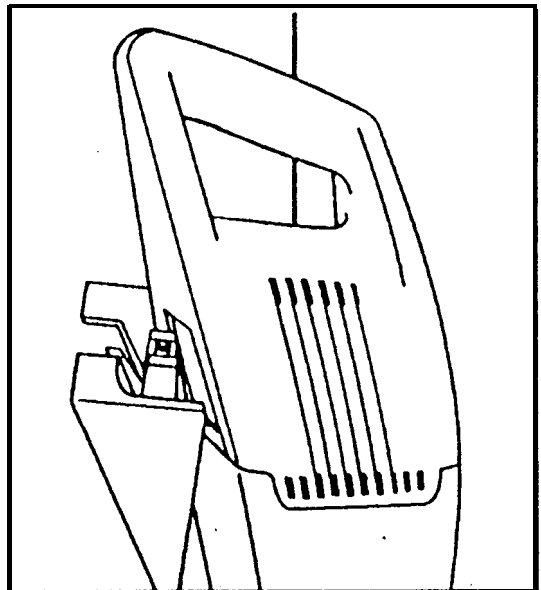

The batteries will be fully charged in 16 hours. At this time, some cleaners will have seven minutes of useful operating time and others, fourteen minutes. If performance drops to an unacceptable level during cleaning time, check problem chart in "Maintenance" section.

NOTE: It is normal for the charger to feel warm when the battery is charging. Never charge batteries in temperatures above 100°F or below 32°F.

How to use

Remove the cleaner from wall bracket and depress ON/OFF switch to operate. Release switch to turn cleaner off and to conserve power between tasks.

Cleaning tools

(available with some models)

The cleaning tools added to the multi-purpose nozzle make it easy to complete the following tasks:

Crevice tool: may be used for wet or dry pick-up in tight spaces, corners, or along edges of places such as dresser drawers, upholstered furniture, stairs and baseboards.




Squeegee: may be used on hard surfaces to pick up **liquids** and to assist in drying surface.

Attach either tool to cleaner by pushing tool firmly into nozzle. Remove tool by pulling straight out.

NOTE: Remove squeegee from nozzle before mounting cleaner in wall bracket.


Picking up dry debris

Use cleaner to remove dust and dirt from upholstered furniture, mattresses, clothing, automobile interiors and carpeted stairs, or for quick pick-up on carpet, rugs and bare floors. Empty collector cup before picking up liquid or wet debris.

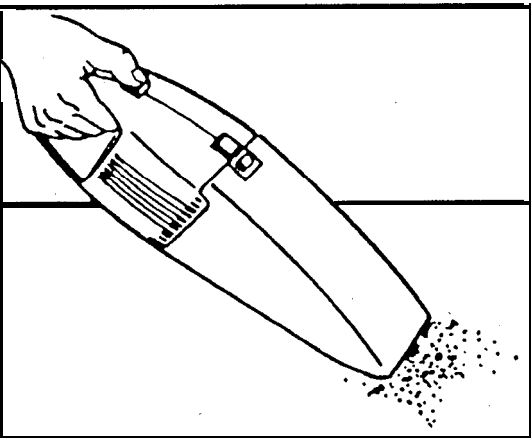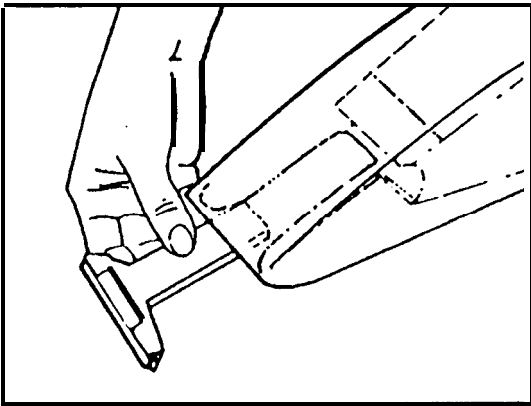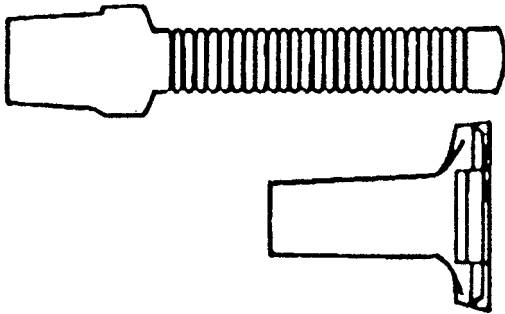


Picking **up liquids** and wet debris

Use this cleaner to pick up liquids and wet debris or a combination of each. Hold the nozzle end down after wet pick-up to avoid any spillage.

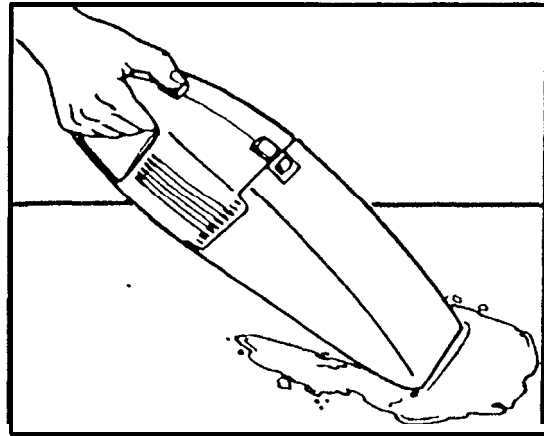

The collector cup will hold approximately 8 oz. of liquid. To check the liquid level, hold cleaner with nozzle down; when liquid is near end of tube, empty cup.

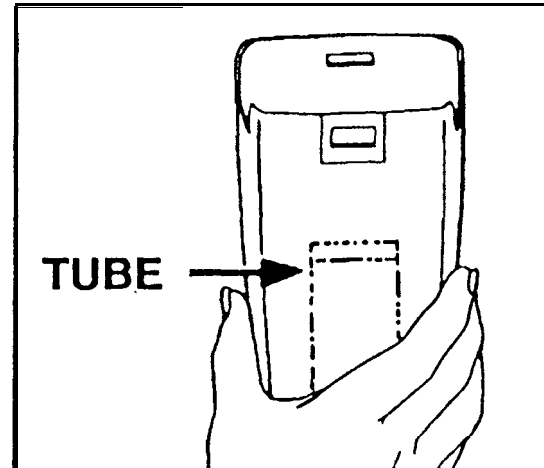

Cleaning spills

Your wet and dry cleaner can be very effective in cleaning up spills if the following procedures are used:

ON CARPET

1. **Immediately** vacuum up as much of the spill as possible.
2. For **oily spills** work some low sudsing carpet shampoo into the area according to the directions on the container. Vacuum up shampoo and spill residue, continue with procedure for water soluble spills.

For **water soluble** spills, dampen area using a spray bottle of cool clear water. Be careful not to saturate carpet.

3. Work water into nap of carpet.
4. Vacuum up water and spill residue.
5. Repeat procedure if necessary, but not more than **four** times to avoid saturating the carpet.
6. Cover the area with several layers of white paper towels or a terry cloth towel. Step on towels several times to blot carpet.
7. Brush up nap of carpet.


ON UPHOLSTERY

1. **Immediately** vacuum up as much of the spill as possible.
2. Follow the furniture manufacturer's instructions for spot cleaning the upholstery, using your cleaner whenever possible.

NOTE: Do not attempt to pick up a solvent based product with this cleaner.

Maintenance

The following sections are concerned with proper maintenance of the cleaner. Familiarize yourself with these home maintenance tasks and keep this owner's manual in a convenient place where you can refer to it when needed. Proper use and care of your cleaner will ensure continued cleaning effectiveness.

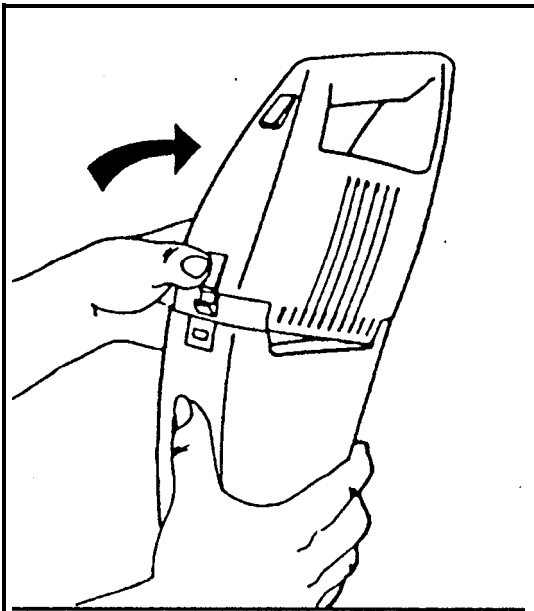


Emptying collector cup

The dirt, liquid and wet, debris picked up by your cleaner is deposited into the collector cup.

Empty cup after each use.

1. Hold cleaner in a vertical position, as shown. Grasp cup section; depress latch and remove motor/handle section of cleaner from cup.

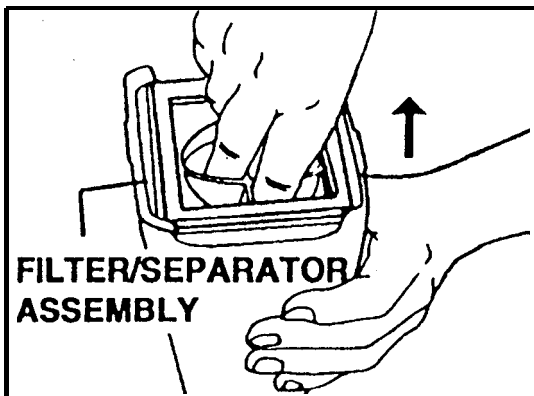

2. With collector cup in hand, grasp center ribs of filter and lift out filter / separator assembly.

3. Empty collector cup.


If you have not finished your cleaning task, shake any debris off filter / separator assembly and replace it in the cup.

4. Reassemble cleaner by hooking projection on bottom of motor/handle section into opening in bottom of cup.

Pivot sections together, making sure latch is secure.

Continue using your cleaner. If a drop in performance is noted, refer to problem chart in the back of this book.

If you have finished using the cleaner, proceed with the following cleaning instructions before storing your cleaner.

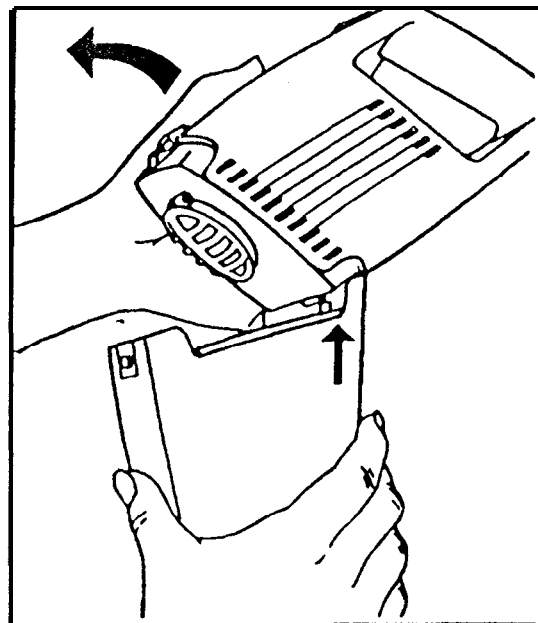



Cleaning your **Dubl-Duty™** cleaner


Note: It is not recommended that any components of this product be washed in a dishwasher.

1. To remove filter from separator, lift up one corner, then pull edges of filter away from separator.
2. Remove any debris; wash and dry separator, if necessary.
3. Remove any debris from the filter by tapping the frame on a hard surface or by brushing filter with a soft brush.
4. If filter is heavily soiled or wet, wash it in warm soapy water, using a soft brush if necessary. Rinse soap off filter.

Note: Be sure to clean all soiled components after picking up perishable food items.


5. Dry filter by blotting with a towel; dry thoroughly before storing filter in cleaner.

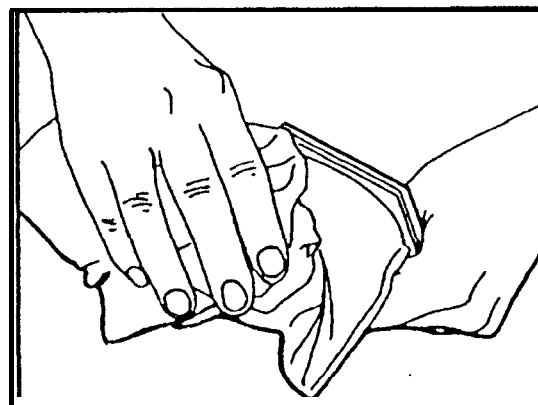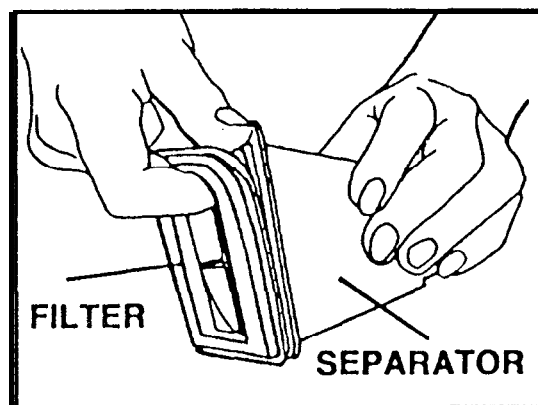

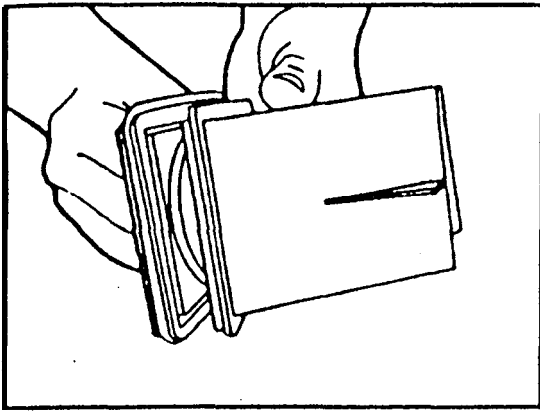


6. If necessary, wash and dry cup before assembly.

7. Align filter frame with separator frame and press edges together.

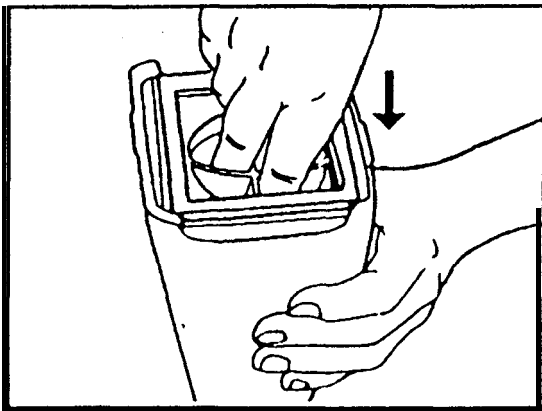

8. Replace filter / separator assembly into collector cup.

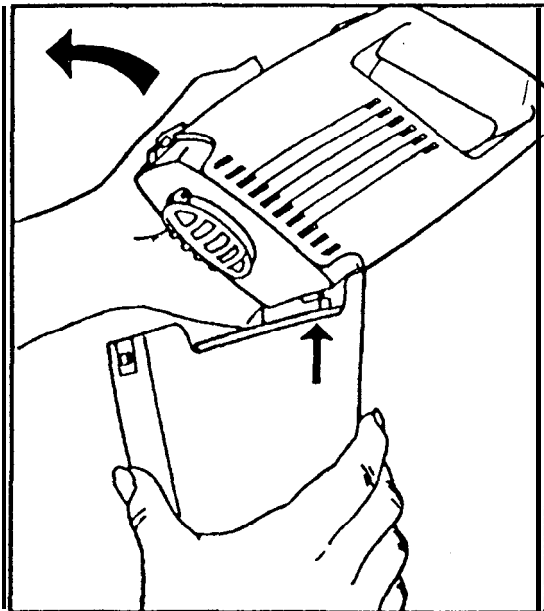

9. If soiled, wipe motor/handle section with a damp cloth. **Do not immerse in water.**

10. Reattach cup assembly to motor as shown.

Hang cleaner back on 'wall bracket for storage and recharging.

Lubrication

The motor bearings are permanently lubricated. The addition of lubricant could cause damage. **Therefore, do not lubricate the motor bearings.**

If you have a problem

This appliance was inspected thoroughly and was in good operating condition when it was shipped from the factory. If a minor problem occurs it usually can be solved quite easily when the cause is found. Therefore, this check list is provided to assist you.

Problem	Possible cause	Possible solution
Cleaner won't run	1. Charger not firmly plugged in. 2. No voltage in electrical outlet. 3. Blown fuse/tripped breaker. 4. Battery not charged.	1. Plug charger in firmly. 2. Check fuse, breaker or wall switch. 3. Replace fuse/reset breaker. 4. Recharge battery making sure cleaner is fully connected to end of cord (see "Charging cleaner" section).
Cleaner won't pick-up	1. Collector cup full. 2. Nozzle or tools clogged. 3. Filter clogged or wet.	1. Empty cup. 2. Remove obstruction. 3. Empty cup and clean filter: blot filter dry.
Dirt or liquid leaking from cleaner	1. Collector cup over filled. 2. Low battery charge.	1. Empty cup. 2. Recharge battery.

Service

To obtain approved HOOVER service and genuine HOOVER parts, locate the nearest **Hoover Factory Service Center or Authorized Hoover Warranty Service Dealer (Depot)** by:

- checking the Yellow Pages under "Vacuum Cleaners - Household"
- checking the list of Factory Service Centers provided with this cleaner OR -
- calling 1-800-944-9200 for an automated referral of authorized service outlet locations (U.S. only).


Do not send your cleaner to The Hoover Company in North Canton for service, this will only result in delay.

If further assistance is needed, contact The Hoover Company Consumer Response Center, North Canton, Ohio 44720 Phone: 216-499-9499.

In Canada, contact Hoover Canada, Burlington, Ontario L7R 4A8, Phone: 1-800-263-6376.

Always identify your cleaner by the **complete** model number when requesting information or ordering parts. (The model number appears on the bottom of the cleaner.)



HOOVER and  are registered trademarks
THE HOOVER COMPANY, NORTH CANTON, OHIO 44720